

DMX Channel Values

CHANNEL	VALUE	FUNCTION	NOTES
1	000 ⇄ 255	Red: (0% ~ 100%)	
2	000 ⇄ 255	Green: (0% ~ 100%)	
3	000 ⇄ 255	Blue: (0% ~ 100%)	
4	000 ⇄ 007	Macro Colors (By LED levels) Off	
	008 ⇄ 015	Red: 100% Green: 20% Blue:	
	016 ⇄ 023	Red: 100% Green: 40% Blue	
	024 ⇄ 031	Red: 100% Green: 60% Blue:	
	032 ⇄ 039	Red: 100% Green: 80% Blue:	
	040 ⇄ 047	Red: 100% Green: 100% Blue:	
	048 ⇄ 055	Red: Green: 100% Blue:	
	056 ⇄ 063	Red: Green: 100% Blue: 20%	
	064 ⇄ 071	Red: Green: 100% Blue: 40%	
	072 ⇄ 079	Red: Green: 100% Blue: 60%	
	080 ⇄ 087	Red: Green: 100% Blue: 80%	
	088 ⇄ 095	Red: Green: 100% Blue: 100%	
	096 ⇄ 103	Red: Green: Blue: 100%	
	104 ⇄ 111	Red: 20% Green: Blue: 100%	
	112 ⇄ 119	Red: 40% Green: Blue: 100%	
	120 ⇄ 127	Red: 60% Green: Blue: 100%	
	128 ⇄ 135	Red: 80% Green: Blue: 100%	
	136 ⇄ 143	Red: 100% Green: Blue: 100%	
	144 ⇄ 151	Red: 100% Green: 25% Blue: 100%	
	152 ⇄ 159	Red: 100% Green: 50% Blue: 100%	
160 ⇄ 167	Red: 100% Green: 75% Blue: 100%		
168 ⇄ 175	Red: 100% Green: 100% Blue: 100%		
176 ⇄ 183	Red: 100% Green: 100% Blue: 25%		
184 ⇄ 191	Red: 100% Green: 100% Blue: 50%		
192 ⇄ 199	Red: 100% Green: 100% Blue: 75%		
200 ⇄ 207	Red: 100% Green: 100% Blue: 100%		
208 ⇄ 215	Red: 20% Green: 100% Blue: 100%		
216 ⇄ 223	Red: 40% Green: 100% Blue: 100%		
224 ⇄ 231	Red: 60% Green: 100% Blue: 100%		
232 ⇄ 239	Red: 80% Green: 100% Blue: 100%		
240 ⇄ 247	Red: 100% Green: 100% Blue: 100%		
248 ⇄ 255	Red: 50% Green: 50% Blue: 50%		
5	000 ⇄ 255	Strobe or Speed: (0% ~ 100%)	
6	000 ⇄ 127	Preset Programs No Function	
	128 ⇄ 159	Fade Program: Use Ch 5 to adjust speed	
	160 ⇄ 223	Color Chase: Use Ch5 to adjust speed	
	224 ⇄ 255	Color Chase: Use rotary knob to adjust speed	
7	000 ⇄ 255	Dimmer: (0% ~ 100%)	