

DMX Mode

This mode allows the unit to be controlled by any universal DMX controller. If you are unfamiliar with DMX, please read the DMX Primer on page 16.

- 1) Set dipswitches 1-9 to the desired DMX address. For help setting the address, see the "SETTING THE STARTING ADDRESS" section on the next page.

DMX Channel Values

CHANNEL	VALUE	FUNCTION
1	000 ⇔ 024	Control/Operating Mode
		Dimmer mode
	025 ⇔ 049	Stand-alone mode 1 (automatic)
	050 ⇔ 074	Stand-alone mode 2 (automatic)
	075 ⇔ 099	Stand-alone mode 3 (automatic)
	100 ⇔ 124	Stand-alone mode 4 (automatic)
	125 ⇔ 149	Stand-alone mode 5 (automatic)
	150 ⇔ 174	Stand-alone mode 6 (automatic)
	175 ⇔ 199	Stand-alone mode 7 (automatic)
	200 ⇔ 224	Stand-alone mode 8 (automatic)
	225 ⇔ 249	Stand-alone mode 9 (automatic)
	250 ⇔ 255	Stand-alone (sound active)
2	000 ⇔ 004	Pod 1
	005 ⇔ 009	Blackout
	010 ⇔ 014	Red
	015 ⇔ 019	Yellow
	020 ⇔ 024	Green
	025 ⇔ 029	Blue
	030 ⇔ 034	Purple
	035 ⇔ 039	Cyan
	040 ⇔ 044	White
	045 ⇔ 049	Auto 1
	050 ⇔ 054	Auto 2
	055 ⇔ 059	Auto 3
	060 ⇔ 064	Auto 4
	065 ⇔ 069	Auto 5
	070 ⇔ 074	Auto 6
	075 ⇔ 079	Auto 7
	080 ⇔ 084	Auto 8
	085 ⇔ 089	Auto 9
	090 ⇔ 094	Auto 10
	095 ⇔ 099	Auto 11
	100 ⇔ 104	Auto 12
	105 ⇔ 109	Auto 13
	110 ⇔ 114	Auto 14
	115 ⇔ 119	Auto 15
	120 ⇔ 124	Auto 16
	125 ⇔ 129	Auto 17
	130 ⇔ 134	Auto 18
135 ⇔ 139	Auto 19	
140 ⇔ 144	Auto 20	
145 ⇔ 149	Auto 21	
150 ⇔ 154	Auto 22	
155 ⇔ 159	Auto 23	
160 ⇔ 164	Auto 24	
165 ⇔ 169	Auto 25	
170 ⇔ 255	Auto 26	
3	000 ⇔ 004	Pod 2
	005 ⇔ 009	Blackout
	010 ⇔ 014	Red
	015 ⇔ 019	Yellow
	020 ⇔ 024	Green
	025 ⇔ 029	Blue
	030 ⇔ 034	Purple
	035 ⇔ 039	Cyan
	040 ⇔ 044	White
	045 ⇔ 049	Auto 1
	050 ⇔ 054	Auto 2
	055 ⇔ 059	Auto 3
	060 ⇔ 064	Auto 4
065 ⇔ 069	Auto 5	
070 ⇔ 074	Auto 6	

	075 ⇔ 079	Auto 8
	080 ⇔ 084	Auto 9
	085 ⇔ 089	Auto 10
	090 ⇔ 094	Auto 11
	095 ⇔ 099	Auto 12
	100 ⇔ 104	Auto 13
	105 ⇔ 109	Auto 14
	110 ⇔ 114	Auto 15
	115 ⇔ 119	Auto 16
	120 ⇔ 124	Auto 17
	125 ⇔ 129	Auto 18
	130 ⇔ 134	Auto 19
	135 ⇔ 139	Auto 20
	140 ⇔ 144	Auto 21
	145 ⇔ 149	Auto 22
	150 ⇔ 154	Auto 23
	155 ⇔ 159	Auto 24
	160 ⇔ 164	Auto 25
	165 ⇔ 169	Auto 26
	170 ⇔ 255	Auto 27
	<hr/>	
	000 ⇔ 004	Pod 3
	005 ⇔ 009	Blackout
	010 ⇔ 014	Red
	015 ⇔ 019	Yellow
	020 ⇔ 024	Green
	025 ⇔ 029	Blue
	030 ⇔ 034	Purple
	035 ⇔ 039	Cyan
	040 ⇔ 044	White
	045 ⇔ 049	Auto 1
	050 ⇔ 054	Auto 2
	055 ⇔ 059	Auto 3
	060 ⇔ 064	Auto 4
	065 ⇔ 069	Auto 5
	070 ⇔ 074	Auto 6
	075 ⇔ 079	Auto 7
	080 ⇔ 084	Auto 8
	085 ⇔ 089	Auto 9
	090 ⇔ 094	Auto 10
	095 ⇔ 099	Auto 11
	100 ⇔ 104	Auto 12
	105 ⇔ 109	Auto 13
	110 ⇔ 114	Auto 14
	115 ⇔ 119	Auto 15
	120 ⇔ 124	Auto 16
	125 ⇔ 129	Auto 17
	130 ⇔ 134	Auto 18
	135 ⇔ 139	Auto 19
	140 ⇔ 144	Auto 20
	145 ⇔ 149	Auto 21
	150 ⇔ 154	Auto 22
	155 ⇔ 159	Auto 23
	160 ⇔ 164	Auto 24
	165 ⇔ 169	Auto 25
	170 ⇔ 255	Auto 26
		Auto 27
	<hr/>	
4		
	<hr/>	
5	000 ⇔ 005	Strobing Speed (Dimmer Mode)
	006 ⇔ 255	Blackout
		Slow → Fast
	<hr/>	
6	000 ⇔ 005	Motor Speed
	006 ⇔ 255	Stop
		Slow → Fast