



UTTERMOST

Thank you for purchasing an Uttermost lamp. We hope you are as proud to display this lamp as we were to make it.

- Each lamp is hand finished one at a time, therefore no two are exactly alike.
- Remove the wrapping on the lamp shade, scissors will help, but be careful not to damage the shade.
- The Uttermost finial disk is to be placed on the top of the shade spider, under the finial, as shown in the diagram.

Again, thank you for purchasing an Uttermost lamp.


Assembly Instructions

1. Place harp onto saddle, then place the shade onto the harp.
2. Place shade onto Uttermost finial disk, then fasten finial onto harp to fix shade.

Important Safety Instructions

This portable lamp has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not attempt to defeat this safety feature.

PO BOX 558/3325 GRASSY HILL RD. ROCKY MOUNT, VIRGINIA 24151
www.uttermost.com

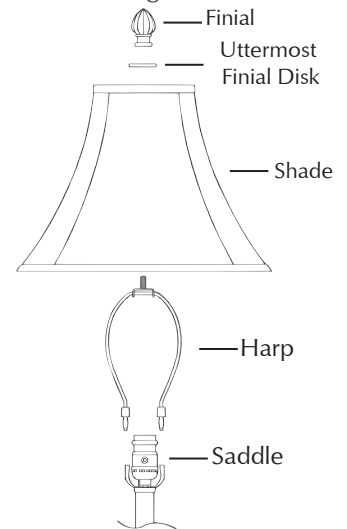

UTTERMOST

Thank you for purchasing an Uttermost lamp. We hope you are as proud to display this lamp as we were to make it.

- Each lamp is hand finished one at a time, therefore no two are exactly alike.
- Remove the wrapping on the lamp shade, scissors will help, but be careful not to damage the shade.
- The Uttermost finial disk is to be placed on the top of the shade spider, under the finial, as shown in the diagram.

Again, thank you for purchasing an Uttermost lamp.

Assembly Instructions

1. Place harp onto saddle, then place the shade onto the harp.
2. Place shade onto Uttermost finial disk, then fasten finial onto harp to fix shade.

Important Safety Instructions

This portable lamp has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not attempt to defeat this safety feature.

PO BOX 558/3325 GRASSY HILL RD. ROCKY MOUNT, VIRGINIA 24151
www.uttermost.com

