



UTTERMOST


ASSEMBLY INSTRUCTIONS

STYLE# 26760-1

Careful unpack all lamp parts from the carton.

1. Place the base in an upright position on a flat surface.
2. Thread **Part B** into **Part A**.
3. Position the **Socket** through the hole on the bottom of the **Shade**. Thread the **Socket Collar** onto the **Socket** to secure them.
Hand tighten until snug.
4. Use ON/OFF 150W bulb (not included).

The turn knob with long screw for the middle of lamp

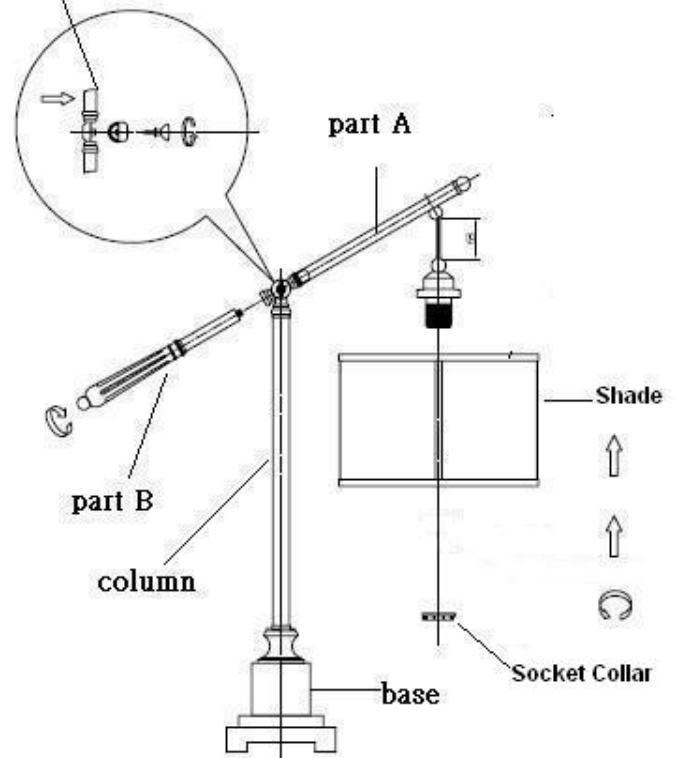

IMPORTANT SAFETY INSTRUCTIONS

This portable lamp has a polarized plug (one blade is wider than the other) as a safety feature to reduce the risk of electric shock.

This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the

outlet, reverse the plug. If it still does not fit, contact a qualified electrician.

Never use with an extension cord unless plug can be fully inserted. Do not attempt to defeat this safety feature.

PO BOX 558/3325 GRASSY HILL RD. ROCKY MOUNT, VIRGINIA 24151

www.uttermost.com