



UTTERMOST

# ASSEMBLY INSTRUCTIONS

## ITEM #: 28412-1 ASSEMBLY

1. Unpack all parts from cartons carefully.
2. Place the SHADE (A) and secure with the FINIAL (B).

### WARNING:

1. Use 4 X 60W maximum type B bulb (bulb not included).
2. Do not use polishes or cleaners on you lamp.


JUST WIPE CLEAN WITH SOFT CLOTH.

### IMPORTANT SAFETY INSTRUCTIONS

This portable lamp has a polarized plug (one blade is wide than the other) as a safety feature to reduce the risk of electric shock. This plug will fit in a polarized outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not attempt to defeat this safety feature.

### SHADE STYLE NO: SHADE 28412-1 CAUTION:

In accordance with the UL regulation .The shade should be open top & bottom and "CD" is bigger than or equal to 5", "R" is not smaller than 2-1/2" or may cause fire.

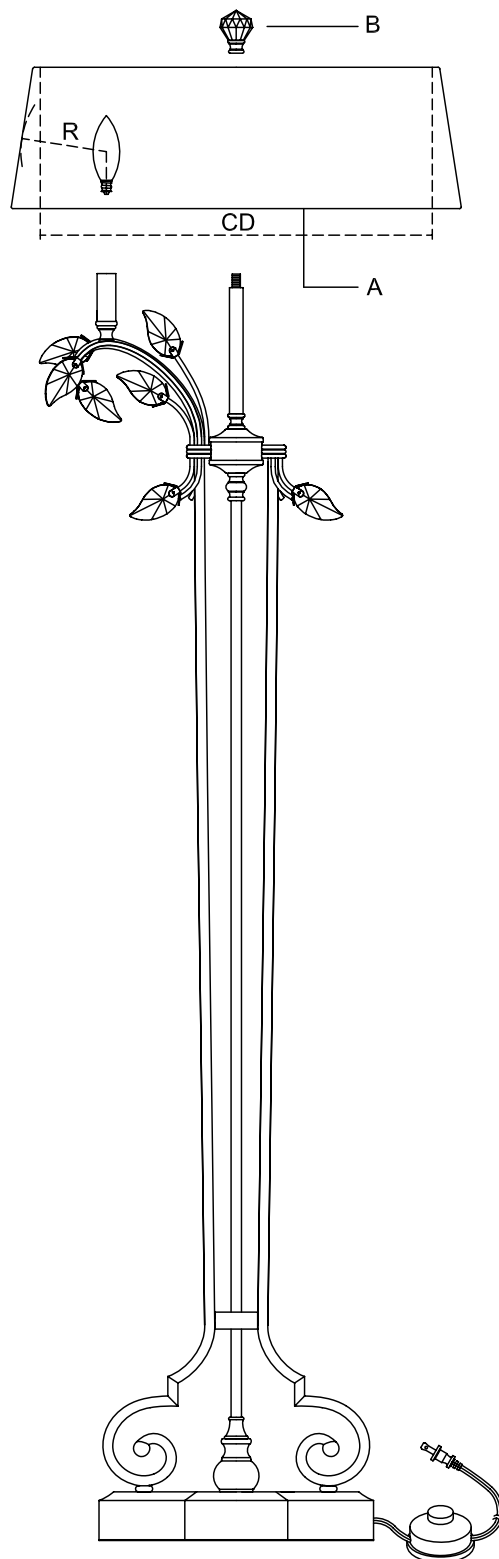

CSA055104FAUT1