



UTTERMOST

ASSEMBLY INSTRUCTIONS

STYLE# 28593-1

Careful unpack all lamp parts from the carton.

1. Place the Base in an upright position on the floor
2. Screw the **Part B** into the **Part A** and turn clockwise to tighten secured.
3. Screw the **Part C** into the **Part B** and turn clockwise to tighten secured.
4. Position the **Socket** through the hole on the top of the **Shade**. Thread the **Socket Collar** onto the **Socket** to secure them. Hand tighten until snug.
5. Carefully lay the assembled pieces on a soft surface and attach the **Rubber Washer**, **Flat Washer** and **Hex Nut** to the threaded pipe under the **Base**. Use **Wrench** to tighten. This tightens the entire lamp base.
6. Use **ON/OFF 150W Type A bulb** (not included).

IMPORTANT SAFETY INSTRUCTIONS

This portable lamp has a polarized plug (one blade is wider than the other) as a safety feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not attempt to defeat this safety feature.

