



## UTTERMOST ASSEMBLY INSTRUCTIONS


**ITEM#: 28716**

### **PARTS LIST:**

**A. Finial B. Shade C. Harp D. Harp Base E. Top carving  
F. Middle column G. Lower column H. Base**

**\*\*Please make sure you have all the parts indicated above before you begin assembly of this item. This item should be assembled on a soft surface to prevent scratching the finish during assembly. This item may require periodic tightening.**

- 1. Place All the parts in a soft position on the floor.**
- 2. Rotate the lower pipe(G) into the base(H), pull the cord make sure it does not get damaged**
- 3. Rotate Middle pipe(F) into the lower pipe(G), pull the cord; and rotate the Top carving(E) into the middle column(F). pull the cord. Make sure the column is straight, then tighten all the parts.**
- 4. Put the harp(C) into the harp base(D), and then put the shade(B) onto the harp(C).**
- 5. Put the finial(A) onto the harp and turn clockwise to tight securely.**
- 6. Use 3-Way 150W bulb(not included).**

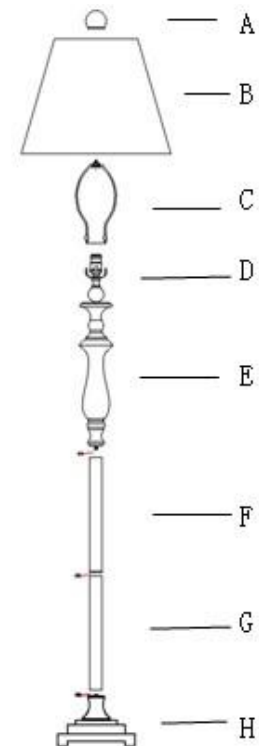

### **IMPORTANT SAFETY INSTRUCTIONS**

**This portable lamp has a polarized plug (one Blade is wider than the other) as a safety feature to reduce the risk of electric shock. This plug will fit in a polarized outlet. reverse the plug, If it still does not fit, Contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted .Do not attempt to defeat this safety feature.**

PO BOX 558/3325 GRASSY HILL RD ROCKY MOUNT VIRGINIA 24151

[www.uttermost.com](http://www.uttermost.com)