



UTTERMOST ASSEMBLY INSTRUCTIONS

ITEM#: 28718-1

PARTS LIST:

A. Base B. Glass C. upper metal frame D. plastic washer E. Button screw F. Dual socket G. Stick H. Shade I. washer J. Finial

****Please make sure you have all the parts indicated above before you begin assembly of this item. This item should be assembled on a soft surface to prevent scratching the finish during assembly. This item may require periodic tightening.**

1. Place All the parts in a soft position on the floor.


2. Put the Glass(B) on the base(A), pull the cord, Put the upper metal frame(C) on the Glass(B).

3. Put the plastic washer (D) on the pipe to protect the painting. Screw the Button(E) to connect upper metal frame(C) with the Base(A). Make sure the column is straight, then tighten all the parts.

4. Rotate the stick(G) into the Socket hole(F), Tighten it. and then put the shade(H) onto the stick(G).

5. Put the washer(I) onto the circle of the shade frame, Rotate the finial(J) into the stick(G) to tighten.

6. Use 2*60W bulb(not included).

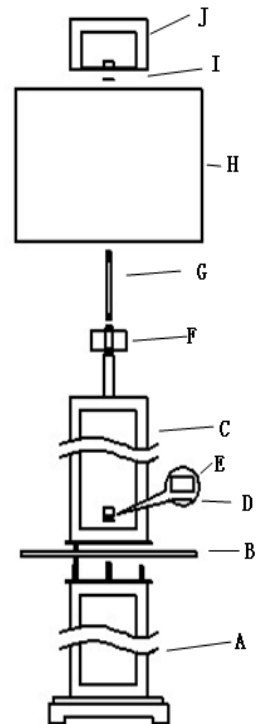

IMPORTANT SAFETY INSTRUCTIONS

This portable lamp has a polarized plug (one Blade is wider than the other) as a safety feature to reduce the risk of electric shock. This plug will fit in a polarized outlet. reverse the plug, If it still does not fit, Contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted .Do not attempt to defeat this safety feature.

PO BOX 558/3325 GRASSY HILL RD ROCKY MOUNT VIRGINIA 24151

www.uttermost.com