 
## PHILIPS ADVANCE

## RM-2SP30-TPBrand NameMAGNETIC STDBallast TypeMagneticStarting MethodRapid StartLamp ConnectionSeriesInput Voltage120Input Frequency60 HZStatusActive

### **Electrical Specifications**

Lamp Type	Num. of Lamps	Rated Lamp Watts	Min. Start Temp (°F/C)	Input Current (Amps)	Input Power (Watts)	Ballast Factor	MAX THD %	Power Factor	Lamp Current Crest Factor	B.E.F
* F30T12	2	30	50/10	0.66	79	0.97	10	1.00	1.6	1.24
F30T12/ES	2	25	60/16	0.58	69	0.90	10	0.98	1.8	1.31





### Diag. 21

The wiring diagram that appears above is for the lamp type denoted by the asterisk (\*)

### Standard Lead Length (inches)

			1	-	in.	cm.
	in.	cm.		Yellow/Blue		
Black	18					
White	18			Blue/White		
				Brown		
Blue	17			Orange		
Red	17			V		
Yellow	26			Orange/Black		
			1	Black/White		
Gray				Red/White		
Violet						

# Enclosure

### **Enclosure Dimensions**

OverAll (L)	Width (W)	Height (H)	Mounting (M)
9.50 "	2.375 "	1.5 "	8.90625 "
9 1/2	2 3/8	1 1/2	8 29/32
24.1 cm	6 cm	3.8 cm	22.6 cm

### Revised 07/01/1999



Data is based upon tests performed by Philips Lighting Electronics N.A. in a controlled environment and is representative of relative performance. Actual performance can vary depending on operating conditions. Specifications are subject to change without notice. All specifications are nominal unless otherwise noted.

### PHILIPS LIGHTING ELECTRONICS N.A.

10275 WEST HIGGINS ROAD · ROSEMONT, IL 60018 Tel: 800-322-2086 · Fax: 888-423-1882 · www.philips.com/advance Customer Support/Technical Service: 800-372-3331 · OEM Support: 866-915-5886