


## ICN4S5490C2LSG@120

Brand Name	CENTIUM T5
Ballast Type	Electronic
Starting Method	Programmed Start
Lamp Connection	Series/Parallel
Input Voltage	120-277
Input Frequency	50/60 HZ
Status	Active

### Electrical Specifications

Lamp Type	Num. of Lamps	Rated Lamp Watts	Min. Start Temp (°F/C)	Input Current (Amps)	Input Power (ANSI Watts)	Ballast Factor	MAX THD %	Power Factor	MAX Lamp Current Crest Factor	B.E.F
F54T5/HO	1	54	-20/-29	0.52	62	0.99	10	0.98	1.7	1.60
F54T5/HO	2	54	-20/-29	0.99	118	0.99	10	0.98	1.7	0.84
F54T5/HO	3	54	-20/-29	1.52	182	1.00	10	0.98	1.7	0.55
* F54T5/HO	4	54	-20/-29	2.00	240	1.00	10	0.98	1.7	0.42

### Wiring Diagram

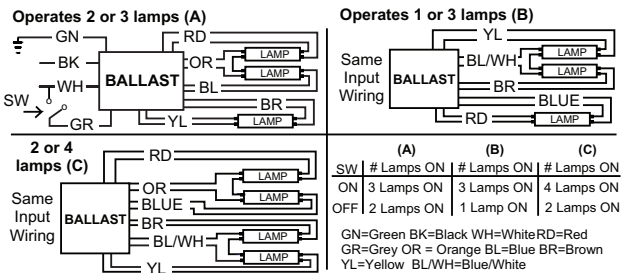


The wiring diagram that appears above is for the lamp type denoted by the asterisk (\*)

### Standard Lead Length (inches)

	in.	cm.		in.	cm.
Black	32	81.3	Yellow/Blue		0
White	32	81.3	Blue/White	42	106.7
Blue	54	137.2	Brown	60	152.4
Red	51	129.5	Orange	42	106.7
Yellow	60	152.4	Orange/Black		0
Gray	32	81.3	Black/White		0
Violet		0	Red/White		0

### Enclosure

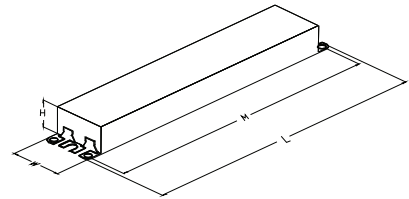

### Enclosure Dimensions

OverAll (L)	Width (W)	Height (H)	Mounting (M)
16.7 "	1.7 "	1.18 "	16.34 "
16 7/10	1 7/10	1 9/50	16 17/50
42.4 cm	4.3 cm	3 cm	41.5 cm

Revised 04/14/2009



Data is based upon tests performed by Philips Lighting Electronics N.A. in a controlled environment and is representative of relative performance. Actual performance can vary depending on operating conditions. Specifications are subject to change without notice. All specifications are nominal unless otherwise noted.

### PHILIPS LIGHTING ELECTRONICS N.A.

10275 WEST HIGGINS ROAD · ROSEMONT, IL 60018  
 Tel: 800-322-2086 · Fax: 888-423-1882 · www.philips.com/advance  
 Customer Support/Technical Service: 800-372-3331 · OEM Support: 866-915-5886