



Thank you for purchasing the Mr. Beams™ Wireless Spotlight. We are committed to eliminating darkness by using the latest in light-emitting diodes (LED's). LED's are the most efficient and durable light sources available. We are certain that your Wireless Spotlight will contribute to a safer environment and provide light where you need it at a very reasonable cost.

**ENCLOSED YOU WILL FIND:**

- Wireless Spotlight
- Mounting Base
- 3 Screws and 2 Anchors

**SPOTLIGHT FEATURES**

**Motion Activated** – Spotlight turns on automatically when motion is detected.

**Auto Shut-Off**—Spotlight shuts off automatically after 30 seconds if no motion is detected.

**Light Sensor** – Wireless Spotlight goes on only in darkness to conserve battery life.

**Fully Adjustable** – Wireless Spotlight can be rotated 360° as well as up and down.

**WARNING**

- Use only new alkaline D-Cell batteries with 1.5V rating. Do not mix old and new batteries. **If batteries are not new, it may cause the light to malfunction.**
- Install batteries with polarity in correct position.
- **If your spotlight will not turn off, that means it is time to replace the batteries.**
- Mount fixture securely with long screw included, and use anchors if not securing to solid wood or other solid material.

**INSTALLATION INSTRUCTIONS**

**BEFORE YOU MOUNT YOUR SPOTLIGHT**

Illustration 1

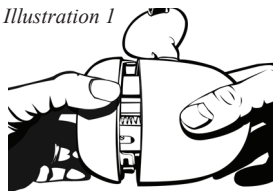


Illustration 2



Illustration 3


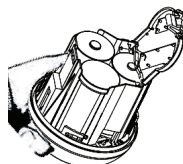


Illustration 4

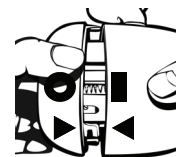

1. Remove front cover of Spotlight by rotating counter-clockwise as shown in **Illustration 1** .. Pull face out from cup to reveal battery holder. (**Illustration 2**)

Insert 3 D-Cell Batteries into Spotlight as shown in **Illustration 3**. Attach battery door by matching the tabs to the rectangular holes and then push down front.

3. Match arrows then turn cover clockwise (**Illustration 4**). **Make sure unit is securely closed with arrow pointing past the lock symbol to ensure weatherproof seal is tight.**

**NOTES: Light sensor only allows Spotlight to activate in darkness. We recommend testing in a dark room or closet. When your Spotlight will not turn off, that means it is time to replace batteries.**

**MOUNTING YOUR SPOTLIGHT**



Illustration 5a

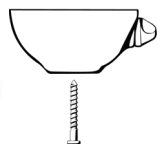


Illustration 6

 
 


Illustration 7



Illustration 8

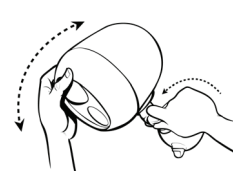


Illustration 9

Determine location for mounting Spotlight. **NOTE: FOR BEST PERFORMANCE, SPOTLIGHT SHOULD BE POSITIONED SO MOTION SENSOR IS ON TOP AND LIGHT IS ON BOTTOM.**

**For easiest installation:**

- Remove the base from the stem by turning the thumbscrew located on the base (**Illustration 5a**). Wiggle base off the stem.
- Drive the long screw through the hole in the center of the base and into the mounting surface (**Illustration 5b**). To attach Spotlight to Mounting Base, insert the stem of the Spotlight and tighten thumb screw.

**A second mounting option** is to attach Mounting Base using two screws as shown in **Illustration 6**. Slide Mounting Base down so screws are securely held by track. If using anchors, use 3/16" drill bit to drill holes and insert anchors. Drive screws into anchors so that screw head protrudes 1/8" from surface (the height of the screw head). If using screws only, use 1/8" drill bit to drill holes and insert screws so that screw head protrudes 1/8" from surface (the height of the screw head). Use template (above) to mark two holes for anchors and/or screws (included) as shown in **Illustration 7**. Make sure that screws are exactly 2-1/8" apart.

We recommend mounting the screws parallel to the ground if mounting on a vertical surface.

**NOTE:** Spotlight can be rotated 360°. To adjust Spotlight direction, loosen smaller thumbscrew on Mounting Base and rotate Flood Light to proper direction as shown in **Illustration 8**. Tighten thumbscrew.

Loosen larger thumbscrew that connects Spotlight Head to Mounting Base and adjust Spotlight Head to proper direction as shown in **Illustration 9**. Tighten thumbscrew.

**LIMITED WARRANTY**

The product you have purchased is guaranteed against defects in workmanship and materials for the period stated on the package. Warranties implied by law are subject to the same time period limitation. Some states do not allow limitations on how long an implied warranty lasts, so this time limitation may not apply to you. If the product fails due to a manufacturing defect during normal use, return the product and dated sales receipt to the store where purchased for replacement OR send the product and the dated sales receipt to the address above. **Not Covered** – Batteries are not covered by this warranty. Repair service, adjustment and calibration due to misuse, abuse or negligence are not covered by this warranty. Unauthorized service or modification to this product or of any furnished components will void this warranty in its entirety. This warranty does not include reimbursement for inconvenience, installation, set-up time, loss of use, postage, unauthorized service, or other products used in conjunction with, but are not supplied by, Wireless Environment. **This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.**