 
WPLED104 INSTALLATION INSTRUCTIONS



Thank you for buying RAB lighting fixtures. Our goal is to design the best quality products to get the job done right. We'd like to hear your comments. Call the Marketing Department at 888-RAB-1000 or email: marketing@rabweb.com







WPLEDC104 Cutoff (7.5 Deg)



WPLEDFC104
Full Cutoff (0 Deg)

IMPORTANT


READ CAREFULLY BEFORE INSTALLING FIXTURE. RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.


Fixtures must be wired in accordance with the National Electrical Code and all applicable local codes. Proper grounding is required for safety. THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.

WARNING: Make certain power is OFF before installing or maintaining fixture. No user serviceable parts inside.

MOUNTING TO WALL

- **1.** Orient **Wall Mounting Box** such that 'TOP' is pointing up.
- Feed supply wires through Gasket and Wall Mounting Box.
- 3. Secure **Wall Mounting Box** to a sturdy wall. Use appropriate mounting hardware such as lag bolts and anchors with washers suitable for the mounting surface. A **Leveling Bubble** is provided to level fixture.
- **4.** Check that **Gasket** is fully sealed.
- 5. Slide the stainless steel **Tether** from the fixture into the **Key Hole Slot** of the **Clip** for hands free wiring.
- **6.** Wire the fixture using suitable wire connectors.
- Place wired fixture over the Wall Mounting Box and tighten the Top Screws. Now tighten the Lower Screws.
- Tighten Close Up Plugs and apply weatherproof silicone sealant to all unused conduit entry points. Also use sealant between the wall and Wall Mounting Box.

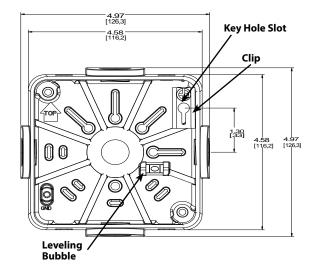

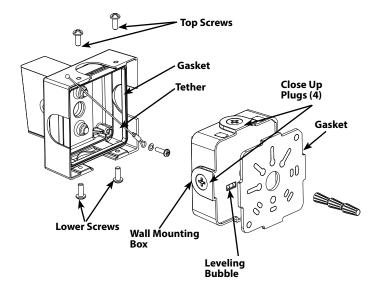

WPLED104 INSTALLATION INSTRUCTIONS

 


Thank you for buying RAB lighting fixtures. Our goal is to design the best quality products to get the job done right. We'd like to hear your comments. Call the Marketing Department at 888-RAB-1000 or email: marketing@rabweb.com

WIRING

Universal voltage driver permits operation at 120V thru 277V, 50 or 60 Hz. Units ordered with (/480V) suffix are 480V.

- 1. Connect the black fixture lead to the (+) LINE supply lead.
- 2. Connect the white fixture lead to the (-) COMMON supply lead.
- 3. Connect the GROUND wire from fixture to supply ground.




TROUBLESHOOTING

- 1. Check that the line voltage at fixture is correct.
- 2. Is there voltage at the lamp fixture wires? If there is no voltage, check all connections.
- 3. Is the fixture grounded properly?

CLEANING & MAINTENANCE

CAUTION: Be sure fixture temperature is cool enough to touch. Do not clean or maintain while fixture is energized.

- 1. Clean glass lens & fixture with non-abrasive glass cleaning solution.
- Do not open fixture to clean the LED. Do not touch the LED.

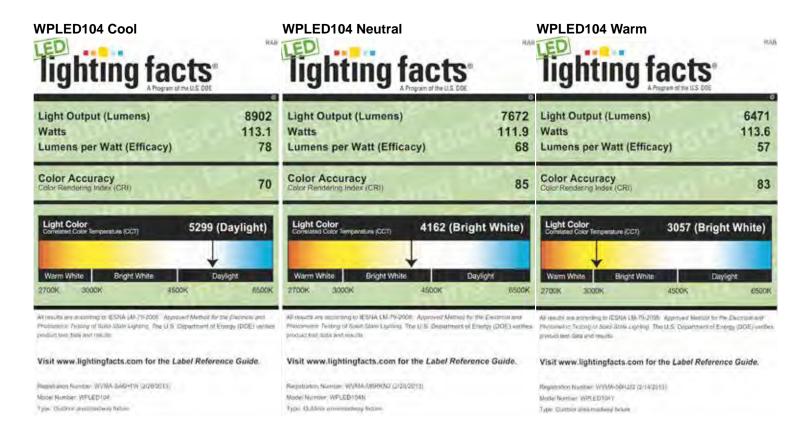

US: pat. D653,377; **CN:** ZL201130356930.8; **MX:** 36921; **CA:** ① - RAB Lighting, Inc

Note: These instructions do not cover all details or variations in equipment nor do they provide for every possible situation during installation, operation or maintenance.



Easy Installation & Product Help

ALED104/WPLED104 BILEVEL SWITCHING



Thank you for buying RAB lighting fixtures. Our goal is to design the best quality products to get the job done right. We'd like to hear your comments. Call the Marketing Department at 888-RAB-1000 or email: marketing@rabweb.com

IMPORTANT

READ CAREFULLY BEFORE INSTALLING FIXTURE. RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.

Fixtures must be wired in accordance with the National Electrical Code and all applicable local codes. Proper grounding is required for safety. THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.

WARNING: Make certain power is OFF before installing or maintaining fixture. No user serviceable parts inside.

WIRING

- 1. Bi-level fixtures have LED's wired in pairs. The two pairs are shown below.
- 2. Each pair has leads brought through the pole arm or the wall mounting box and is labeled as shown below.
- 3. Use the pairs for switching as needed in your application.

