

Assembly Instructions For 21839

Turn off the power at main fuse or circuit breaker box before starting installation.
Carefully unpack and identify all parts before assembly. Bulbs are not included.

- 1.Canopy 2.Universal Mounting plate 3.Fixture Mounting Screw
4.Hex Nut 5.Decorative Nut 6.Mounting Screw 7.Ground Screw
8.Black to Black Wire Connector
9.White to White Wire Connector 10.Ceiling Outlet Box

1. Unpack the Fixture.

You should have received the following hardware: universal Mounting plate(1PCS),
8/32" x 1-1/4" Fixture Mounting Screw(2PCS) 8/32" Mounting Screw(PCS), Hex Nut(4PCS),
Decorative Nut(2PCS) Wire Connector (2PCS), Screw (3pcs)

2. Wiring Assembly.

- (1). Remove the Decorative Nuts(5) under the Canopy(1) and take out the Mounting plate(2).
Attach the Universal Mounting plate to the Ceiling Outlet Box(10) by using two Mounting Screws(6).
(See the Diagram beside).
- (2). Attach the power supply wires to the fixture wire by connecting Black to Black(9)
and White to White(8), using two Twist-on Wire Connectors(8&9). Attach the Power
Supply ground wires from the Ceiling Outlet Box and the Fixture Ground wire from the fixture
to the Green Ground Screw(7) on the Mounting Bracket(4). After the Wires are connected, Tuck them
carefully in the Outlet Box(10).
- (3). Place the Canopy(1) over the Ceiling Outlet Box(10) and onto the Fixture Mounting Screws(3) until they
protrude out from the Canopy (1) for about 1/4". Remove the Canopy and secure the position by
tightening the Hex Nuts(4) against the Mounting Plate (2).
Place the Canopy back onto the Fixture Mounting Screws and secure into place by using the Decorative
Nuts(5) provided.

3. Install one Light Bulb(not included).

See relamping label located at socket area for type and wattage allowed.

Put the Glass Diffuser onto the Shade and secure it with three screws Installation Completed.

