



UTTERMOST

# ASSEMBLY INSTRUCTIONS

## ITEM #: 26337-1 ASSEMBLY

1. Unpack all parts from cartons carefully.
2. Screw CRYSTAL (F) onto the BASE (A).
3. Insert the HARP (B) onto the BASE saddle (A).
4. Place the SHADE (C) and the PIECE (D) onto the HARP (B) and then screw the FINIAL (E) onto the HARP (B) till tight to secure the SHADE (C).

### WARNING:


1. Use 100W maximum type A bulb (bulb not included).
2. Do not use polishes or cleaners on you lamp.  
**JUST WIPE CLEAN WITH SOFT CLOTH.**

### IMPORTANT SAFETY INSTRUCTIONS

This portable lamp has a polarized plug (one blade is wide than the other) as a safety feature to reduce the risk of electric shock. This plug will fit in a polarized outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not attempt to defeat this safety feature.

### SHADE STYLE NO: SHADE 26337-1 CAUTION:

In accordance with the UL regulation .The shade should be open top & bottom and "CD" is bigger than or equal to 4-1/2", "R" is not smaller than 4" or may cause fire.

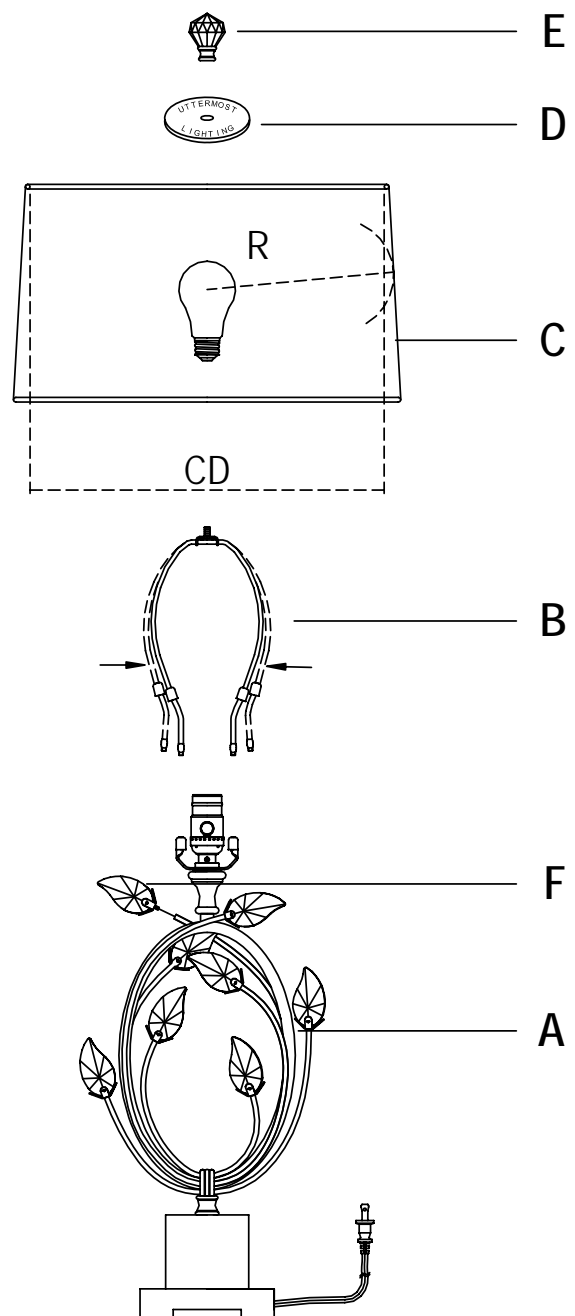

CSA055101TAUT1