



UTTERMOST ASSEMBLY INSTRUCTIONS


ITEM#: 26469-1

PARTS LIST:

**A. Finial B. Outside Shade (Aluminium) C. Inner Shade (fabric)
D. Harp E. Lamp Body**

****Please make sure you have all the parts indicated above before you begin assembly of this item. This item should be assembled on a soft surface to prevent scratching the finish during assembly. This item may require periodic tightening.**

- 1. Take out the table lamp from the package .**
- 2. Locate the Harp(D) by pressing the end of the Harp(D) into the harp clip on the top of the Lamp Body(E).**
- 3. Remove the cover of the Inner Shade(C). Place the Inner Shade(C) over the top end of the Harp(D), Put the outside Shade over the top of the Harp, Rotate the Finial(A) to tighten the Shades.**
- 4. Use 3-Way 150W bulb(not included).**

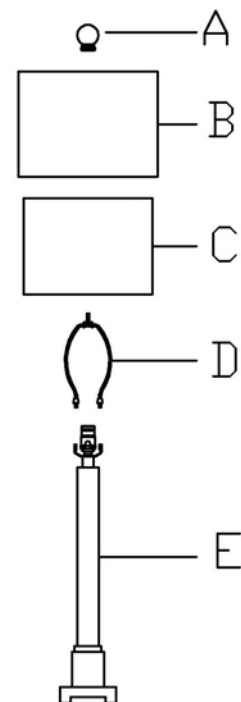

IMPORTANT SAFETY ISTRUCTIONS

This portable lamp has a polarized plug (one Blade is wider than the other) as a safety feature to reduce the risk of electric shock. This plug will fit in a polarized outlet. reverse the plug, If it still does not fit, Contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted .Do not attempt to defeat this safety feature.