

**ASSEMBLY INSTRUCTIONS** 

UTTERMOST


## STYLE# 26475-1

## Careful unpack all lamp parts from the carton.

- 1. Place the **Base** in an upright position on the floor.
- 2. Locate the **Harp** by pressing the ends of the Harp into the **Harp Clips** on the top of **Base**.
- 3. Place **Outside Shade** and **Inner Shade** over the top end of the **Harp**. Secure by thread the **Finial**
- 4. Put the **ON/OFF 100W Type A Bulb** (not included) onto the lamp before connecting the plug to the electricity outlet Box.



This portable lamp has a polarized plug as a safety feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug.If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted.Do not attempt to defeat this safety feature.

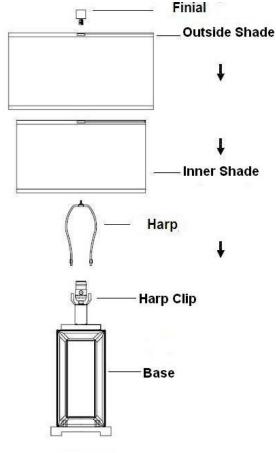

26475-1

PO BOX 558/3325 GRASSY HILL RD. ROCKY MOUNT, VIRGINIA 24151 www.uttermost.com