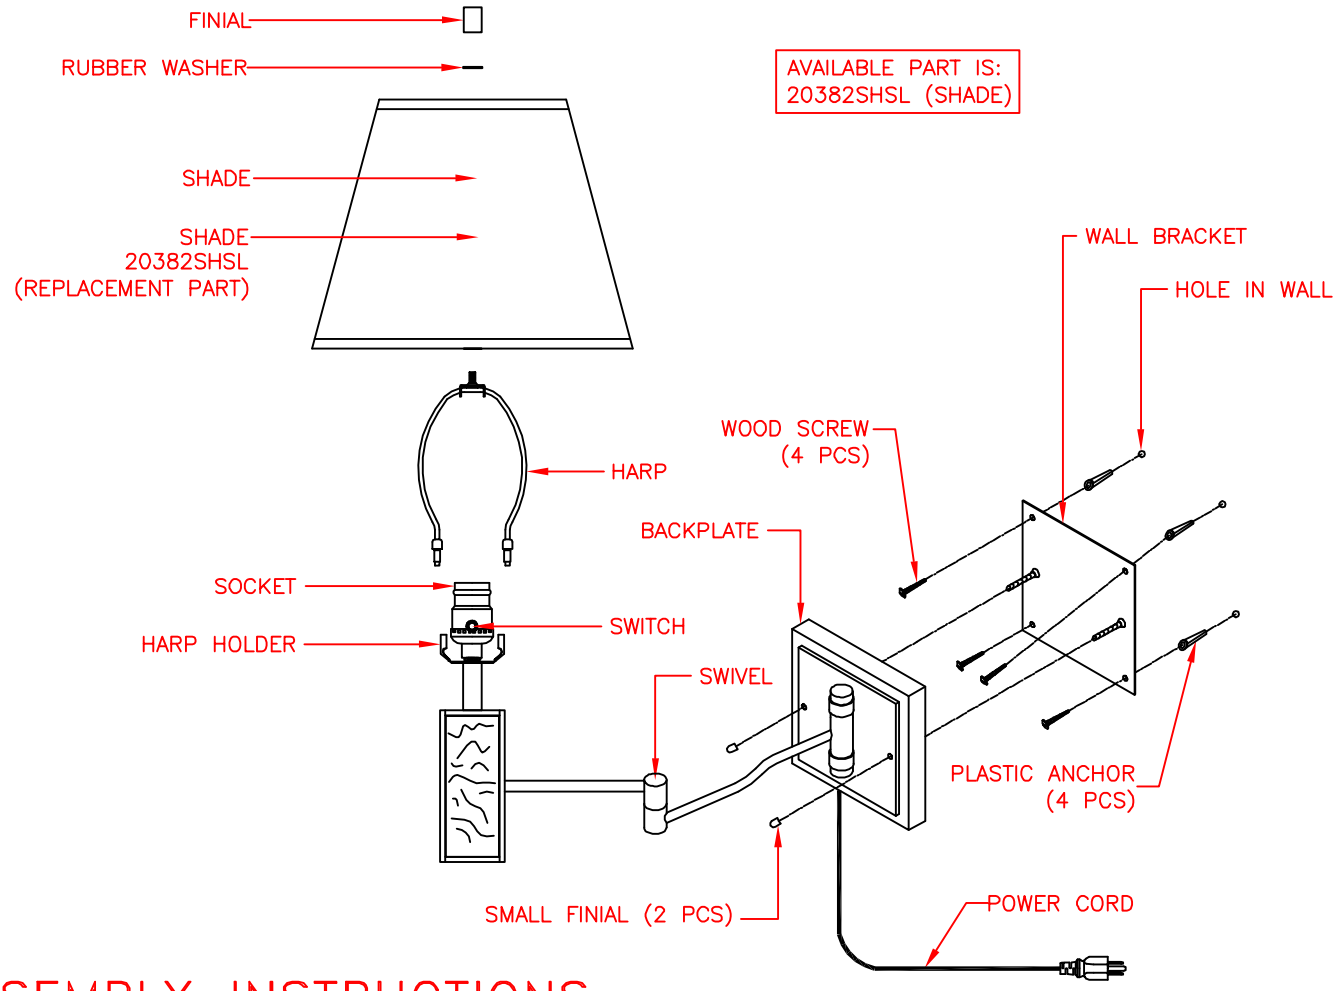

ASSEMBLY INSTRUCTIONS

READ AND SAVE THESE INSTRUCTIONS

CAUTION: INJURY TO PERSONS AND DAMAGE TO THE LAMP AND/OR MOUNTING SURFACE MAY RESULT IF THE LAMP IS PULLED AWAY FROM THE SURFACE: TO REDUCE THE LIKELIHOOD OF SUCH INJURY OR DAMAGE, MOUNT ONLY ON A SURFACE THAT IS MECHANICALLY SOUND.

TOOLS: YOU WILL NEED THE FOLLOWING TOOLS OR EQUIPMENT:
SCREWDRIVER, PENCIL, ANCHORS AND SCREWS PROVIDED, DRILL WITH 1/4" DRILL BIT, IF INSTALLING ON A HOLLOW WALL.

UNPACK THE LAMP: CHECK THE CONTENTS OF THE BOX. YOU SHOULD HAVE RECEIVED THE FOLLOWING: FINIAL, RUBBER WASHER, HARP, SHADE AND LAMP ASSEMBLY. HARDWARE PACKAGE CONSISTING OF (4) SCREWS AND (4) ANCHORS.

ASSEMBLE THE LAMP:

1. REMOVE THE WALL BRACKET FROM THE BACKPLATE BY REMOVING THE (2) SMALL FINIALS ON THE FRONT OF THE BACKPLATE. PLACE SMALL FINIALS ASIDE UNTIL LATER.

2. PLACE WALL BRACKET IN THE DESIRED LOCATION ON THE WALL AND MARK WITH A PENCIL. (NOTE: THE WALL BRACKET SHOULD BE MOUNTED ON A WALL STUD USING A SCREWDRIVER. IF MOUNTING ON A HOLLOW AREA, DRILL 1/4" PILOT HOLES AND INSERT ANCHORS WHERE THE LOCATION WAS MARKED.) PLACE THE WALL BRACKET ON THE WALL, INSERT AND TIGHTEN WOOD SCREWS. (SEE WALL BRACKET ASSEMBLY ABOVE).

3. PLACE THE BACKPLATE COVER THE WALL BRACKET AND SECURE WITH THE (2) SMALL FINIALS REMOVED ABOVE.

4. SQUEEZE LEGS OF THE HARP TOGETHER AND INSERT THE TWO ENDS BETWEEN THE PRONGS OF THE HARP HOLDER.

5. PLACE SHADE ONTO HARP, THEN SECURE WITH RUBBER WASHER AND FINIAL.

6. INSTALL A 150 WATT MAXIMUM MEDIUM BASE 3–WAY TYPE "A" BULB (NOT INCLUDED) INTO SOCKET.

7. PLUG THE POWER CORD INTO AN OUTLET AND TURN ON AT SWITCH.