ALED™ POST TOP INSTALLATION INSTRUCTIONS

Thank you for buying RAB lighting fixtures. Our goal is to design the best quality products to get the job done right. We'd like to hear your comments. Call the Marketing Department at 888-RAB-1000 or email: marketing@rabweb.com

IMPORTANT

READ CAREFULLY BEFORE INSTALLING FIXTURE. RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.
Fixtures must be wired in accordance with the National Electrical Code and all applicable local codes. Proper grounding is required for safety. THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.
WARNING: Make certain power is OFF before installing or maintaining fixture. No user serviceable parts inside.

FIXTURE ASSEMBLY

1. Feed the (3) **Housing wires** through one of the three **Rods**.
2. Clip the (3) **Rods** onto the **Housing.** Be sure the **Housing** clips are properly engaged onto the **Rods**.
3. Feed **Fixture Wires** through the **Tenon Pole Adaptor.**
4. Slide **Tenon Pole Adaptor** on three **Rods**. Be sure the notches face the inside of the **Tenon Pole Adaptor**.
5. Tighten the (3) Set Screws at the **Tenon Pole Adaptor** to secure **Rods**.

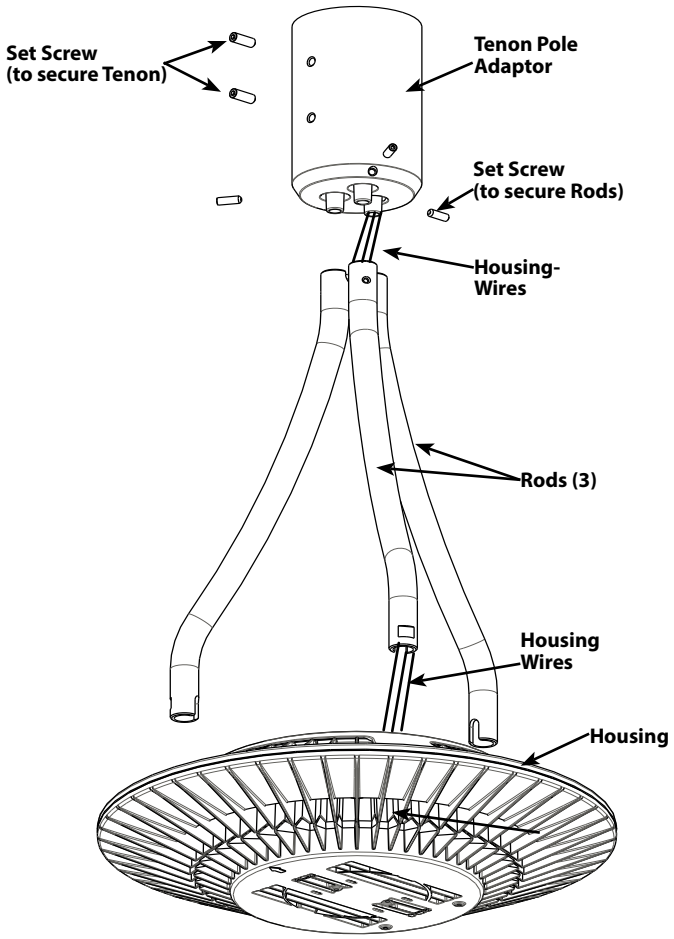

POLE MOUNTING

1. Make the wiring connections with UL approved connectors knot the wires for strain relief.
2. Slip **Tenon Pole Adaptor** over 2 3/8" diameter tenon and secure with the set screws on the side of **Tenon Adaptor.**

ALED™ POST TOP INSTALLATION INSTRUCTIONS

Thank you for buying RAB lighting fixtures. Our goal is to design the best quality products to get the job done right. We'd like to hear your comments. Call the Marketing Department at 888-RAB-1000 or email: marketing@rabweb.com

WIRING

Universal voltage driver permits operation at 120 to 277VAC, 50 or 60Hz.

1. Connect the black fixture lead to the (+) LINE supply lead.
2. Connect the white fixture lead to the (-) COMMON supply lead.
3. Connect the bare copper Ground wire from fixture to supply ground.

CLEANING & MAINTENANCE

CAUTION: Be sure fixture temperature is cool enough to touch. Do not clean or maintain while fixture is energized.

1. Clean glass lens with non-abrasive glass cleaning solution.
2. Do not open fixture to clean the LED. Do not touch the LED.

TROUBLESHOOTING

1. Check that the line voltage at fixture is correct. Refer to wiring directions.
2. Is the fixture grounded properly?

Note: These instructions do not cover all details or variations in equipment nor do they provide for every possible situation during installation operation or maintenance.

ALED5T52

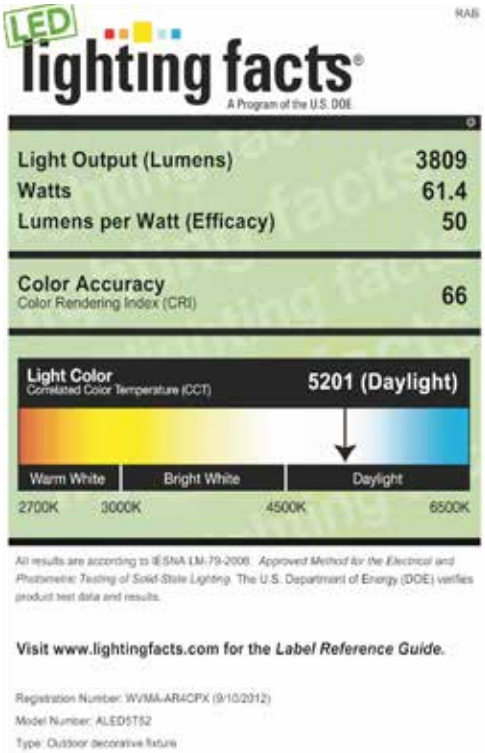

ALED5T78

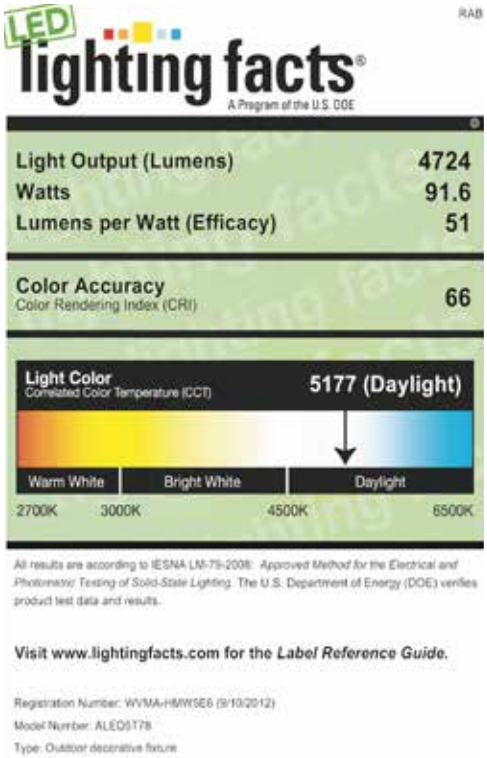

©2012 RAB LIGHTING Inc.
Northvale, New Jersey 07647 USA
ALED5T78 IN-1012

Easy Installation & Product Help

Tech Help Line
Call our experts 888 RAB-1000

rabweb.com
Visit our website for product info

email
Answered promptly sales@rabweb.com