
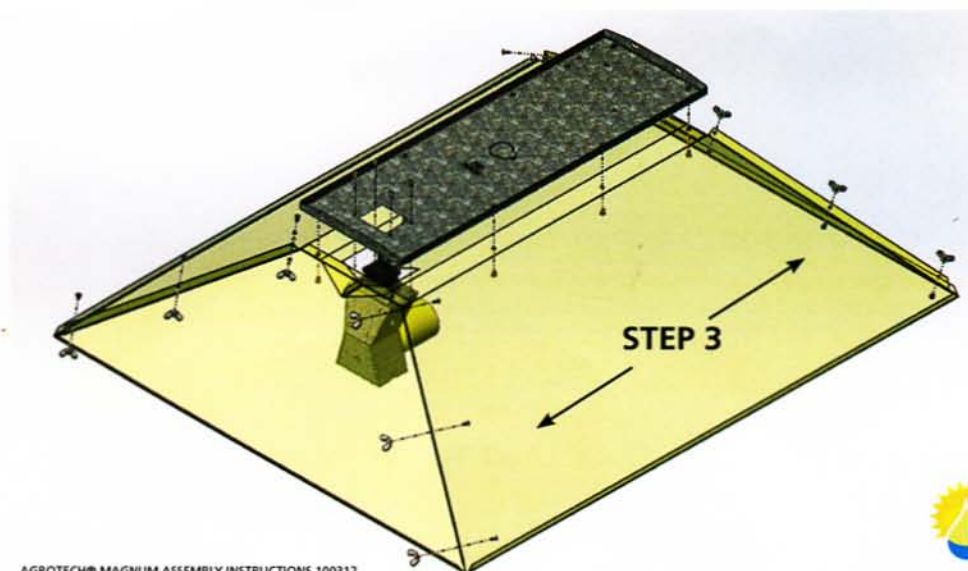
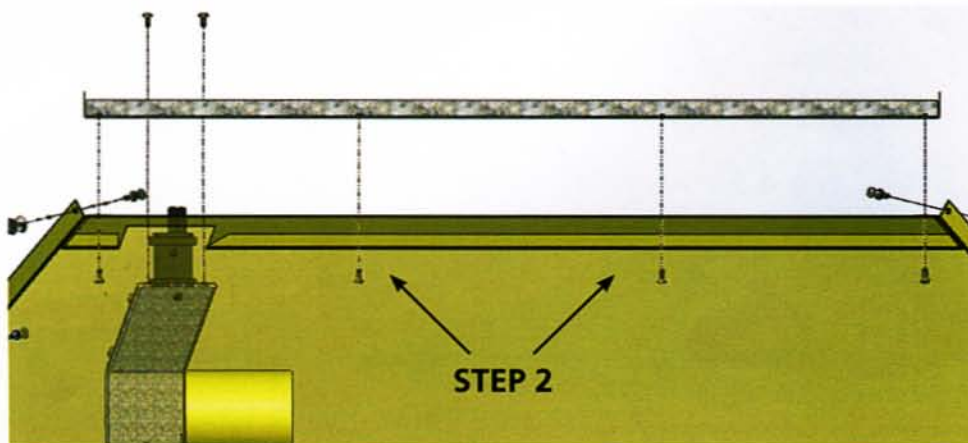


Agrotech® Magnum Assembly Instructions

Assemble on a large flat surface and avoid contact with sharp metal edges.

TOOLS NEEDED: Phillips Head Screwdriver

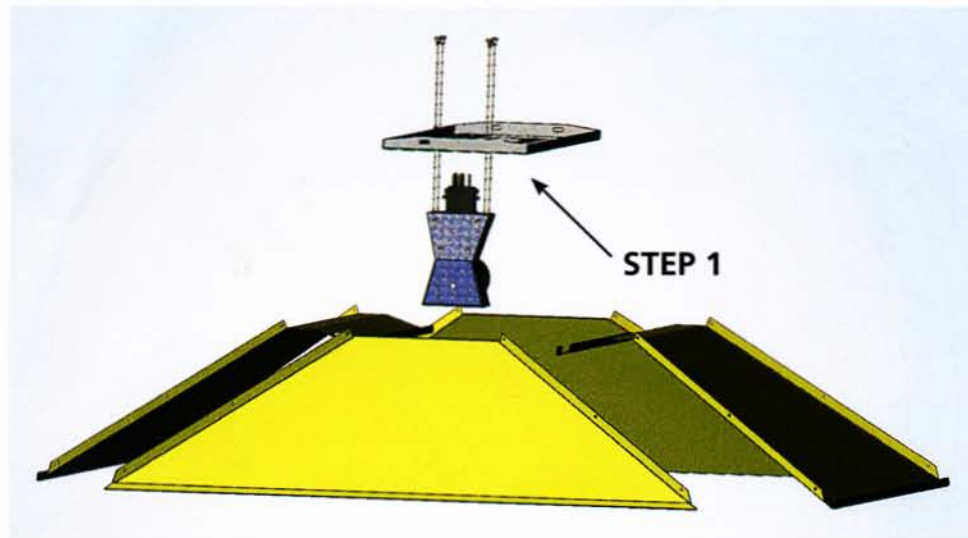

PARTS LISTING:

- (2) Chrome Wire Hangers
- (2) Side Panels
- (2) End Panels
- (1) Top Spine
- (1) Socket
- (24) Screws
- (12) Wing Nuts

STEP 1

Attach the J-Box to the spine using four (4) screws.

STEP 2

Attach the top spine, the end panels and then the side panels with eight screws (8) screws as shown.

STEP 3

Secure all four corners with remaining twelve (12) screws and wing nuts.

STEP 4 - NOT PICTURED

Hang with two (2) chrome wire hangers, insert the lamp and you're ready to grow!

