




UTTERMOST

ASSEMBLY INSTRUCTIONS

STYLE# 21894

Careful unpack all lamp parts from the carton.

1. Take the lamp carefully out of the Carton, and place it on a flat surface.
2. Be sure the power to the installation point is power off
3. Thread **Stem** into the **coupling** underside of the socket cluster, Hand tighten until snug.
4. Place the **Ceiling Canopy** over the **Mounting Screws** and thread **Mounting Balls** onto the **Mounting Screws** to secure it , Hand tighten until snug.
5. Located the following components over the end of the **stem** in turn **Diffuser** ,**Rubb washer**,**Flat washer**.
6. Thread the **Hex Nut** onto the end of the **Stem** and tighten until snug to secure the above parts, threaded **Finial** onto the end of the **Stem** and hand.tighten until snug.
7. Install bulbs (not included). See label located at socket area for type and maximum allowed wattage.

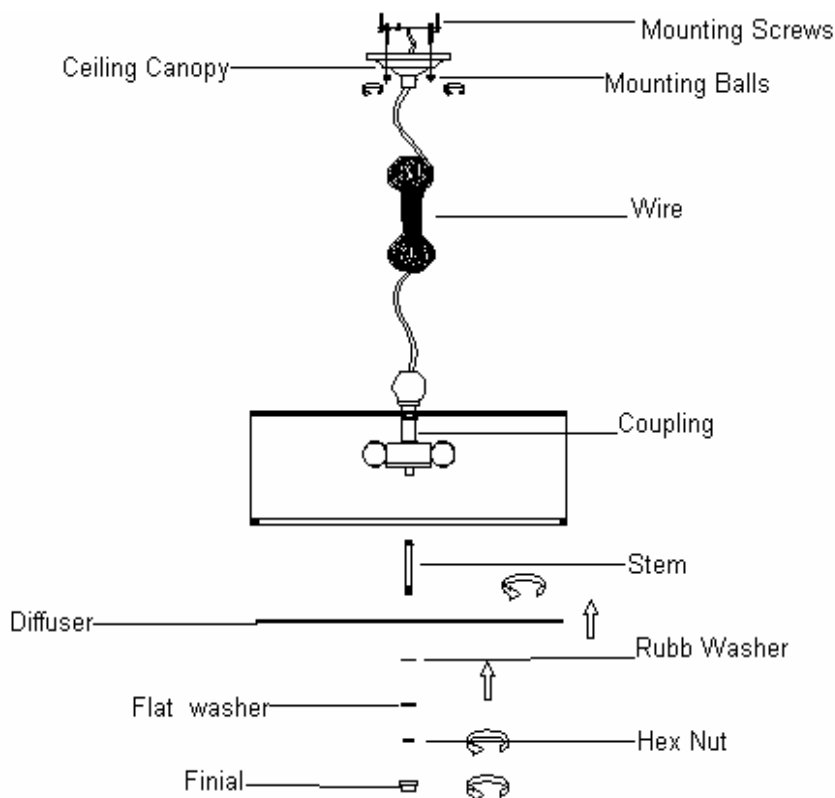

PO BOX 558/3325 GRASSY HILL RD. ROCKY MOUNT, VIRGINIA 24151

www.uttermost.com