




UTTERMOST

# ASSEMBLY INSTRUCTIONS

STYLE# **28591-1**

*Careful unpack all lamp parts from the carton.*

1. Place the Base in an upright position on the floor.
2. Thread the **Part A** onto the **Base**, and turn clockwise to tighten secure.
3. Screw the **Part B** into the **Part A**  
and turn clockwise to tighten secured.
4. Thread the **Part C** onto the **Part B**,  
and turn clockwise to tighten secured.
6. Position the **Socket** through the hole on the top of  
the **Outside Shade** and **Inner Shade**. Secure by  
thread the **Socket Collar** onto the **Socket**.  
Hand tighten until snug.
7. Use **ON/OFF 150W Type A bulb** ( not included).

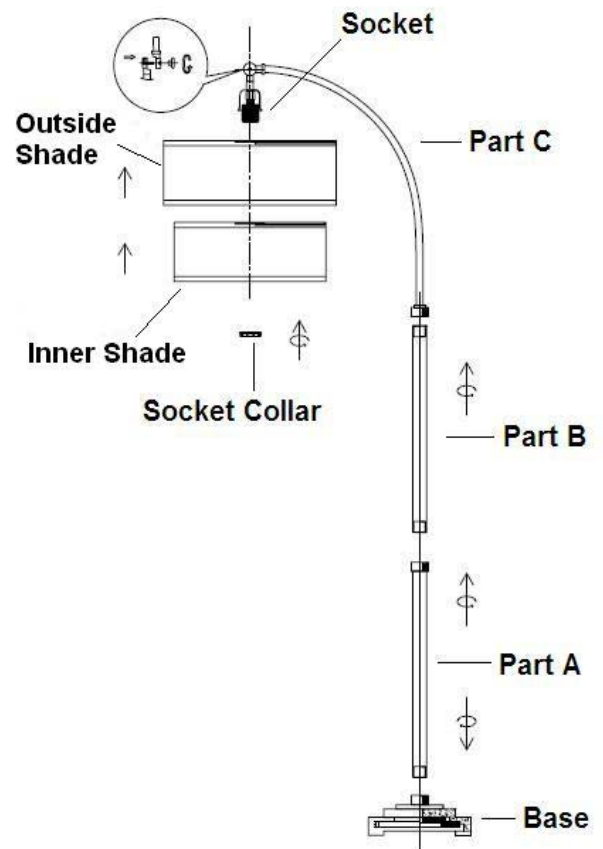

28591-1

## IMPORTANT SAFETY INSTRUCTIONS

This portable lamp has a polarized plug ( one blade is wider than the other ) as a safety feature to reduce the risk of electric shock.

This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not attempt to defeat this safety feature.