




UTTERMOST

ASSEMBLY INSTRUCTIONS

STYLE# **29497-1**

Careful unpack all lamp parts from the carton.

1. Place the Base in an upright position on the floor.
2. Position the **Socket** through the hole on the top of the **Shade**. Thread the **Socket Collar** onto the **Socket** to secure them. Hand tighten until snug.
3. Put the **ON/OFF 150W Type A Bulb** (not included) onto the lamp before connecting the plug to the electricity outlet Box.

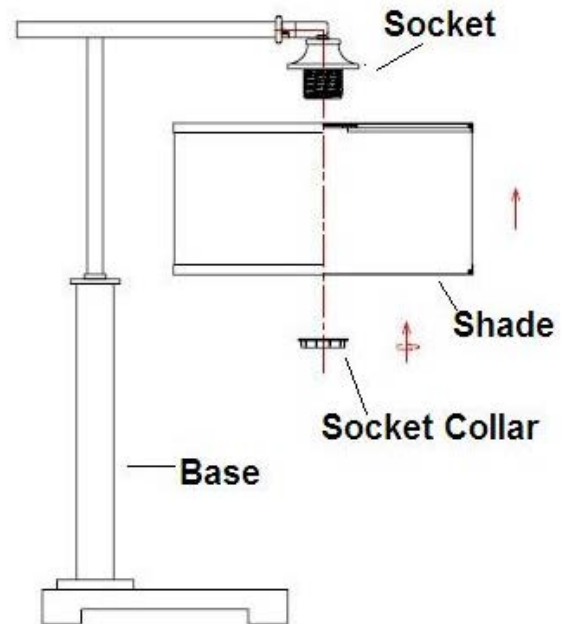

29497-1

IMPORTANT SAFETY INSTRUCTIONS

This portable lamp has a polarized plug as a safety feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not attempt to defeat this safety feature.

PO BOX 558/3325 GRASSY HILL RD. ROCKY MOUNT, VIRGINIA 24151

www.uttermost.com