



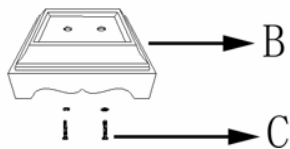

UTTERMOST

Assembly Instruction

STYLE: 20641

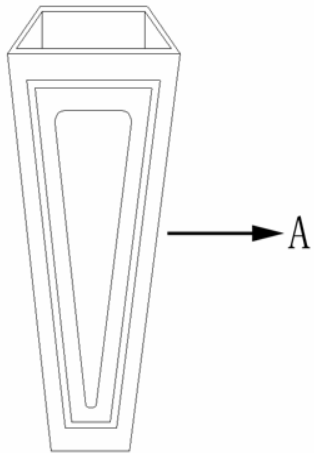

1. Take the parts carefully out of the carton, and place it on a flat surface, make sure that the parts will not be damaged.

2. Place the part(A) into base(B), make sure the two screw holes on the base(B) fit in with the screw holes of the part(A).

3. Insert two screws(C) with washers and then secure then by screw driver(included).

4. Place the top(D) into part(A).