

2007-2014+ Jeep Wrangler Window Mount Light Bar Brackets

Kit For Putco 10004 Block LED Lamp Only

KIT CONTENTS:	
Description	Qty.
Light Bar Driver Side Bracket	1
Light Bar Passenger Side Bracket	1
Rubber Spacer	2

Tools Needed:

- T 40 Torx Bit
- Ratchet

Bracket Installation

1. Remove bracket kit from packaging. Check to see if all parts from above kit contents table are included.
2. Remove Bolts shown in **Figure 1** and set aside for both driver and passenger sides. Use **T40** Torx Bit to remove.
3. Place rubber spacers under driver and passenger bracket and install using factory hardware. Tighten Down Using **T40** Torx Bit. Driver and passenger brackets are shown in **Figure 2**.
4. Mount light in top hole of bracket. **(These brackets are designed for Putco 10004 Block LED Lamp)**

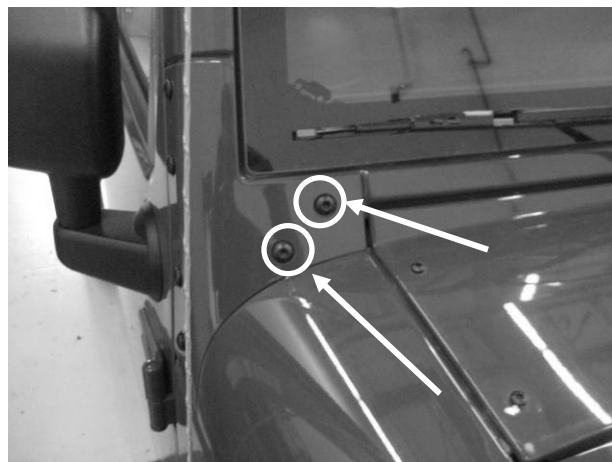


Figure 1

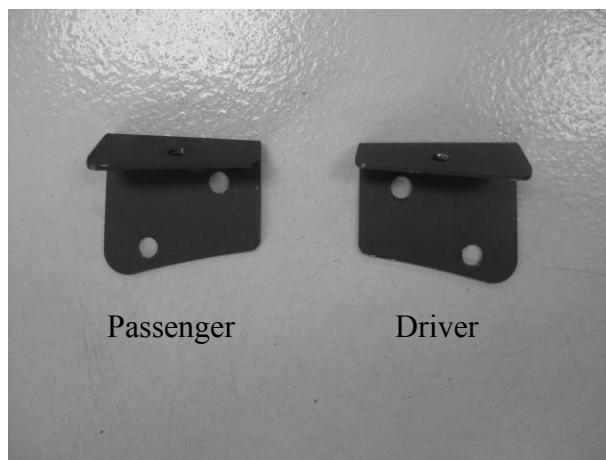


Figure 2

LIMITED 90 DAY WARRANTY

Putco guarantees its Stainless Steel and Aluminum products against defects in workmanship and material for as long as you own your vehicle. All painted products have a 90 day warranty on the painted surface. Any defects resulting from faulty material or workmanship will be warranted by Putco and repaired or replaced at our discretion. Putco assumes no extra labor costs. Damages caused by freight carriers, improper installation, misuse, collision, or neglect will not be warranted by Putco.

5/30/2014 - JW