

# **TECHNICAL BULLETIN METAL HALIDE**

## EYE HORTILUX- BLUE<sup>™</sup> MT250D/HTL-BLUE

Product Code: 57799


#### ANSI Code: Use with ballast rated for ANSI M58 lamp

Features:

· Exclusive Iwasaki chemistry provides ratios of Red, Blue, and Green that better meet the needs of plants

- Designed to grow high quality natural-looking plants during all phases of their growth cycles
   Used Professionally in plant Physiological research, Biotechnology, and Pharmacology

PERFORMANCE DATA			
Initial lumens at rated watts after 100 hours operation	18000	lm	
Mean lumens at 10 hours/start	13500	lm	
Rated average life at10hrs/start	10000	h	
Warm up time, maximum	8	min	
Correlated color temperature	6500	K	
CIE chromaticity	0.310, 0.349	X, Y	
Color rendering index (Ra)	90		
Operating Position	Universal		
Time to hot re-start, maximum	15 max.	min	

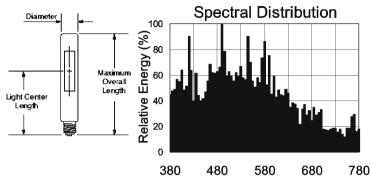


Wavelength (nm)


ELECTRICAL CHARACTERISTICS			
Nominal lamp wattage	250	W	
Nominal lamp voltage	130	V	
Nominal lamp current	2.1	A <sub>ms</sub>	
Maximum current crest factor	1.8	-	
Maximum starting current	3.5	Ams	
Minimum starting current	2.1	A <sub>ms</sub>	
Ballast requirements	Use with ballast rated for ANSI M58 lamp		
Open circuit voltage (CWA)	300	V <sub>ms</sub>	
-30°C (-22°F)	540	V <sub>peak</sub>	
Pulse requirements	None		

PHYSICAL DESCRIPTION				
Maximum overall length	220 (8.661)	mm (in)		
Light center length	150 (5.906)	mm (in)		
Bulb diameter	48 (1.890)	mm (in)		
Max. base - bulb eccentricity	3 max.	Degrees		
Maximum base temperature	210 (410)	°C (°F)		
Maximum bulb temperature	400 (752)	°C (°F)		
Bulb designation	T15			
Bulb material	Borosilicate (Hard Glass)			
Arc tube material	Quartz			
Effective arc length	29 (1.142)	mm (in)		
Bulb finish	Clear			
Base designation	E39 Mogul			

#### FIXTURE REQUIREMENT

E Rated - Enclosed fixture required

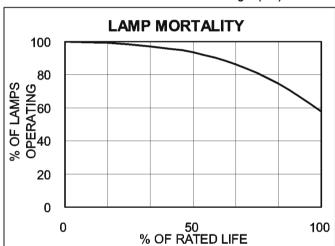

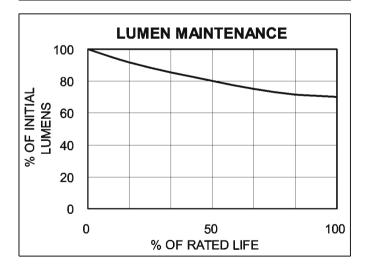



EYE LIGHTING INTERNATIONAL **OF NORTH AMERICA, INC.** 

A SUBSIDIARY OF IWASAKI ELECTRIC CO., LTD.

Address: 9150 Hendricks Rd., Mentor, OH 44060 Phone: 888-665-2671 Fax: 800-811-7395 E-Mail: sales@eyelighting.com Phone: (440) 350-7000 Fax: (440) 350-7001 Web: www.eyelighting.com www.eyehortilux.com

EQS-N-52-78-57799



### 

This lamp can cause serious skin burn and eye inflammation from short-wave ultraviolet radiation if outer envelope of the lamp is broken or punctured. Do not use where people will remain for more than a few minutes unless adequate shielding or other safety precautions are used. Lamps that will automatically extinguish when the outer envelope is broken or punctured are commercially available.

#### **RISK OF ELECTRIC SHOCK**

•Turn power off before inspection, installation or removal •Protect lamp from direct contact with liquids to avoid breakage from thermal shock

#### **RISK OF FIRE**

•Keep combustible materials away from lamp during operation

#### UNEXPECTED LAMP RUPTURE MAY CAUSE INJURY, FIRE, OR PROPERTY DAMAGE

Do not exceed rated ballast voltage •Do not use lamp if outer glass is scratched or broken.
Do not use beyond rated life •Do not turn on lamp until fully installed •Use only with a fixture and ballast rated for this product •Turn lamp off at least once a week for 15 minutes
Electrically insulate any metal to glass support in fixture

## 

#### **RISK OF BURN**


•Allow lamp to cool before handling.

#### LAMP MAY SHATTER AND CAUSE INJURY

•Do not use excessive force when installing lamp •Dispose of lamp in a closed container

### LAMP OPERATING INSTRUCTIONS

This is a discharge lamp and requires some time to restart and come up to full brightness after a power interruption. If power supply dips or is interrupted, lamps may extinguish and not restart. Turn off power supply for 10-15 minutes and allow lamp to fully cool. Lamp will restart when power is restored.



### Hg-LAMP CONTAINS MERCURY

Manage in Accord with Disposal Laws See: www.lamprecycle.org or 1-888-665-2677



EYE LIGHTING INTERNATIONAL OF NORTH AMERICA, INC. A SUBSIDIARY OF IWASAKI ELECTRIC CO., LTD.

Address: 9150 Hendricks Rd., Mentor, OH 44060 Phone: 888-665-2671 Fax: 800-811-7395 E-Mail: sales@eyelighting.com Phone: (440) 350-7000 Fax: (440) 350-7001 Web: www.eyelighting.com www.eyehortilux.com

EQS-N-52-78-57799

TB MT250D\_HTL\_BLUE 9/27/2004