

# **TECHNICAL BULLETIN** MERCURY VAPOR LAMP

# Mercury Vapor HF400PD

**Product Code: 70358** ANSI Code: H33

Full line product offering


Features: Long life


Nickel-plated base

• F	Rugged	construction
-----	--------	--------------

Applications: Roadway, Landscape, Factory, Sports, Parking, Security


PERFORMANCE DATA				
Initial lumens at rated watts after 100 hours operation	24000	lm		
Mean lumens at 10 hours/start	19584	lm		
Rated average life	24000	h		
Warm up time (90% lumens)	4	min		
Correlated color temperature	4100	K		
CIE chromaticity	0.375, 0.367	X ,Y		
Color rendering index	40			
Operating Position	Any			
Time to hot re-start	10 (max)	min		

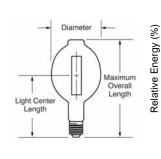


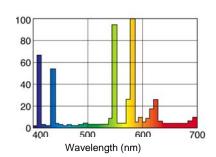

ELECTRICAL CHARACTERISTICS				
Nominal lamp wattage	400	W		
Nominal lamp voltage	135	V		
Nominal lamp current	3.2	Arms		
Current crest factor (max)	2			
Ballast requirements				
Open circuit voltage	225	Vrms		
-30°C (-22°F)	318	Vpeak		
Min. starting current	3.2	Arms		
Max. starting current	7.5	Arms		

PHYSICAL DESCRIPTION					
Effective arc length	-	mm (in)			
Maximum overall length	291 (11.46)	mm (in)			
Light center length	185 (7.3)	mm (in)			
Bulb diameter	116 (4.6)	mm (in)			
Base to bulb eccentricity (max)	4	deg			
Maximum base temperature	210 (410)	°C(°F)			
Maximum bulb temperature	400 (752)	°C(°F)			
Bulb designation	BT37				
Bulb material	Borosilicate glass				
	(Hard glass Lead Free)				
Arc tube material	Quartz				
Bulb finish	Phosphor Coated				
Base designation	E39 Mogul				
Base Solder (one side only)	Sn (tin) 5% and Pb (lead) 95%				

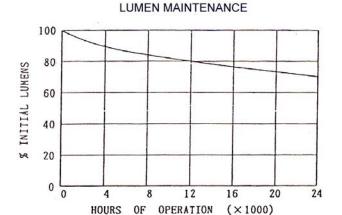

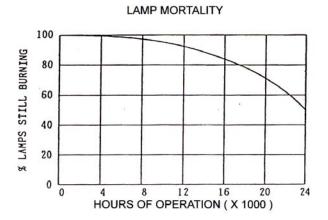

ISO 9001:2000 Certified ISO 14001:2004 Certified OHSAS 18001:1999 Certified ISO 17025:2005 Accredited

EYE LIGHTING INTERNATIONAL OF NORTH AMERICA, INC.

A SUBSIDIARY OF IWASAKI ELECTRIC CO., LTD.

Address: 9150 Hendricks Rd., Mentor, OH 44060
Phone: 888-665-2677 Fax: 800-811-7395 E-Mail:sales@eyelighting.com

Phone: (440) 350-7000 Fax: (440) 350-7001 Web: www.eyelighting



## **TECHNICAL BULLETIN MERCURY VAPOR LAMP**

## **AWARNING**

This lamp can cause serious skin burn and eye inflammation from short-wave ultraviolet radiation if outer envelope of the lamp is broken or punctured. Do not use where people will remain for more than a few minutes unless adequate shielding or other safety precautions are used. Lamps that will automatically extinguish when the outer envelope is broken or punctured are commercially available.

#### RISK OF ELECTRIC SHOCK

•Turn power off before inspection, installation or removal •Protect lamp from direct contact with liquids to avoid breakage from thermal shock

#### **RISK OF FIRE**

•Keep combustible materials away from lamp during operation

#### UNEXPECTED LAMP RUPTURE MAY CAUSE INJURY, FIRE, OR PROPERTY DAMAGE

•Do not exceed rated ballast voltage •Do not use lamp if outer glass is scratched or broken. •Do not use beyond rated life •Do not turn on lamp until fully installed •Use only with a fixture and ballast rated for this product •Turn lamp off at least once a week for 15 minutes •Electrically insulate any metal to glass support in fixture

## **ACAUTION**

#### **RISK OF BURN**

•Allow lamp to cool before handling.

#### LAMP MAY SHATTER AND CAUSE INJURY

•Do not use excessive force when installing lamp •Dispose of lamp in a closed container

#### LAMP OPERATING INSTRUCTIONS

This is a discharge lamp and requires some time to restart and come up to full brightness after a power interruption. If power supply dips or is interrupted, lamps may extinguish and not restart. Turn off power supply for 10-15 minutes and allow lamp to fully cool. Lamp will restart when power is restored.

> Conforms to: R USA: 21CFR1040.30 Canada: ANSI 136.1-2000

- LAMP CONTAINS MERCURY. Manage in Accord with Disposal Laws. See: www.lamprecycle.org or 1-888-665-2677.

ISO 9001:2000 Certified ISO 14001:2004 Certified OHSAS 18001:1999 Certified ISO 17025:2005 Accredited Address: 9150 Hendricks Rd., Mentor, OH 44060

EYE LIGHTING INTERNATIONAL OF NORTH AMERICA, INC. A SUBSIDIARY OF IWASAKI ELECTRIC CO., LTD.

Phone: 888-665-2677 Fax: 800-811-7395 E-Mail:<u>sales@eyelighting.com</u>

Phone: (440) 350-7000 Fax: (440) 350-7001 Web: www.eyelighting