



# TECHNICAL BULLETIN METAL HALIDE

## EYE HORTILUX-BLUE™ MT400D/HOR/HTL-BLUE

**ANSI Code:** Use with ballast rated for ANSI M59 lamp


**Product Code:** 57816

**Features:**

- Exclusive Iwasaki chemistry provides ratios of Red, Blue, and Green that better meet the needs of plants
- Designed to grow high quality natural-looking plants during all phases of their growth cycles
- Used Professionally in plant Physiological research, Biotechnology, and Pharmacology


### PERFORMANCE DATA

Initial lumens at rated watts after 100 hours operation	29000	lm
Mean lumens at 10 hours/start	22000	lm
Rated average life at 10hrs/start	12000	h
Warm up time, maximum	8	min
Correlated color temperature	6500	K
CIE chromaticity	0.310, 0.349	X, Y
Color rendering index (Ra)	90	
Operating Position	HOR±15°	
Time to hot re-start, maximum	15 max.	min

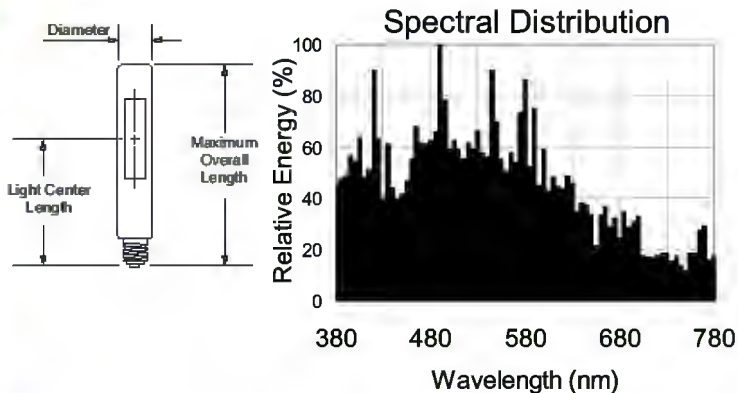


### ELECTRICAL CHARACTERISTICS

Nominal lamp wattage	400	W
Nominal lamp voltage	135	V
Nominal lamp current	3.3	A <sub>rms</sub>
Maximum current crest factor	1.8	-
Maximum starting current	5.0	A <sub>rms</sub>
Minimum starting current	3.3	A <sub>rms</sub>
Ballast requirements	Use with ballast rated for ANSI M59 lamp	
Open circuit voltage (CWA) -30°C (-22°F)	295	V <sub>rms</sub>
	530	V <sub>peak</sub>
Pulse requirements	None	

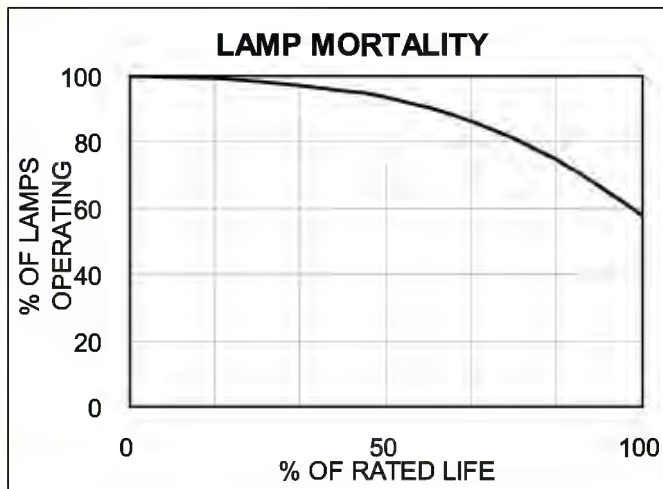

### PHYSICAL DESCRIPTION

Maximum overall length	250 (9.843)	mm (in)
Light center length	147 (5.787)	mm (in)
Bulb diameter	55 (2.165)	mm (in)
Max. base - bulb eccentricity	3 max.	Degrees
Maximum base temperature	210 (410)	°C (°F)
Maximum bulb temperature	400 (752)	°C (°F)
Bulb designation	T17	
Bulb material	Borosilicate (Hard Glass)	
Arc tube material	Quartz	
Effective arc length	38 (1.496)	mm (in)
Bulb finish	Clear	
Base designation	E39 Mogul	

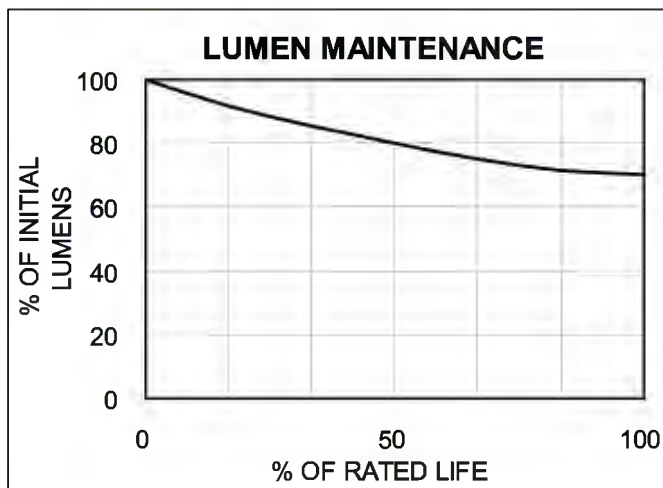

### FIXTURE REQUIREMENT

E Rated - Enclosed fixture required



**EYE LIGHTING INTERNATIONAL  
OF NORTH AMERICA, INC.**  
A SUBSIDIARY OF IWASAKI ELECTRIC CO., LTD.

Address: 9150 Hendricks Rd., Mentor, OH 44060  
Phone: 888665-2677 Fax: 800-811-7395  
Phone: (440) 350-7000 Fax: (440) 350-7001  
www.eyehortilux.com

E-Mail: sales@eyelighting.com  
Web: www.eyelighting.com



**⚠ WARNING**

This lamp can cause serious skin burn and eye inflammation from short-wave ultraviolet radiation if outer envelope of the lamp is broken or punctured. Do not use where people will remain for more than a few minutes unless adequate shielding or other safety precautions are used. Lamps that will automatically extinguish when the outer envelope is broken or punctured are commercially available.

**RISK OF ELECTRIC SHOCK**

- Turn power off before inspection, installation or removal
- Protect lamp from direct contact with liquids to avoid breakage from thermal shock

**RISK OF FIRE**

- Keep combustible materials away from lamp during operation

**UNEXPECTED LAMP RUPTURE MAY CAUSE INJURY, FIRE, OR PROPERTY DAMAGE**

- Do not exceed rated ballast voltage
- Do not use lamp if outer glass is scratched or broken.
- Do not use beyond rated life
- Do not turn on lamp until fully installed
- Use only with a fixture and ballast rated for this product
- Turn lamp off at least once a week for 15 minutes
- Electrically insulate any metal to glass support in fixture

**⚠ CAUTION**

**RISK OF BURN**

- Allow lamp to cool before handling.

**LAMP MAY SHATTER AND CAUSE INJURY**

- Do not use excessive force when installing lamp
- Dispose of lamp in a closed container

**LAMP OPERATING INSTRUCTIONS**

This is a discharge lamp and requires some time to restart and come up to full brightness after a power interruption. If power supply dips or is interrupted, lamps may extinguish and not restart. Turn off power supply for 10-15 minutes and allow lamp to fully cool. Lamp will restart when power is restored.

<b>R</b>	Conforms to: USA: 21CFR1040.30
----------	-----------------------------------

**Hg-LAMP CONTAINS MERCURY**

Manage in Accord with Disposal Laws

See: [www.lamprecycle.org](http://www.lamprecycle.org) or 1-888-665-2677



**EYE LIGHTING INTERNATIONAL  
OF NORTH AMERICA, INC.**  
A SUBSIDIARY OF IWASAKI ELECTRIC CO., LTD.

Address: 9150 Hendricks Rd., Mentor, OH 44060  
Phone: 888665-2677 Fax: 800-811-7395  
Phone: (440) 350-7000 Fax: (440) 350-7001  
[www.eyehortilux.com](http://www.eyehortilux.com)

E-Mail: [sales@eyelighting.com](mailto:sales@eyelighting.com)  
Web: [www.eyelighting.com](http://www.eyelighting.com)